



The product will be upgraded year by year, and there may be slight differences between the actual product and the pictures and content, which will not be announced one by one. Qingdu has full interpretation power

Personal hygiene health and beauty products that have undergone complete washing and care work cannot be returned

Installation and operation process



- 1 Press and hold the "Power" button for 2 seconds to turn on the power and enter standby mode
- 2 Touch the "Mode" button to adjust the time and related modes for long and short hair
- 3 Touch the "Start/Pause" button to start drying or pause work
- 4 Touch the "▲ ▼" key to adjust the temperature
- 5 Turn the air volume knob to adjust the strength of the wind, and turn it clockwise to increase the wind speed

Suggested parameter settings for use

Temperature setting: 38 degrees Celsius in summer and 39 degrees Celsius in winter (compatible with cats and dogs)
Time setting: The default time is 30 minutes, which can be directly selected. Dogs and small cats have an average time of 15 to 20 minutes
Wind speed setting: clockwise to maximum airflow

Suggested usage environment

Dry environment helps improve drying efficiency
The machine needs to release moisture and should not be placed in an area filled with debris, as it is not conducive to ventilation

Tutorial on drying within 30 minutes

Please make sure to follow this method and quickly blow out beautiful and smooth hair



Wrap with a large towel for 1 minute first, Press and grab the large amount of water, especially the buttocks.



Adjust the time to 30 minutes and the temperature to 38 degrees, Adjust the air volume to the highest level.



Comb your hair for 10 minutes to avoid Knot and blow out a soft effect.



At 20 minutes, feel the dryness of the hair by touching it with your hand, To determine if we need to blow for a little more time.

After use, it is necessary to clean the hair collection on the top of the inner box using a brush or hand. Mao Juji Not removing too much will affect the efficiency of the next use.

Negative ion automatic start

After the negative ions start up, they will also start inside the machine without the need for control operation.

Power cut-off

The machine is controlled by a countdown command, and after setting the time, the timer will be timed according to the usage time Gradually reduce until the work is completed. When the work is completed, the machine will stop supplying air and insulation.

Packaging Content




host



Including gifts, etc

Component composition

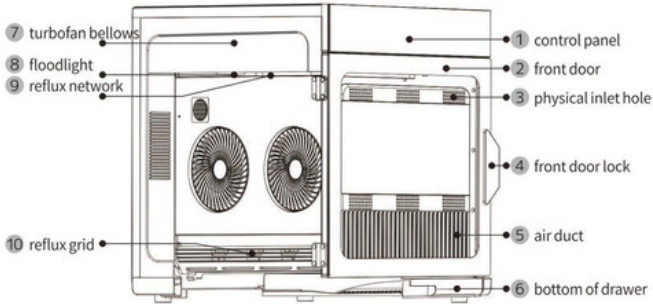

Bottom cleaning of drawers



The chassis can be pulled forward like a drawer.

Specifications

product model: PCR-8	
rated power: 125~1000W	fan speed :Continuously variable transmission
rated voltage: 220V 50Hz	temperature range :20 °C ~40 °C
number of turbofans: 2PCS	time setting: 30 ~ 80 minutes
Applicable pets: Fat body size up to 11kg, slender body size up to 9kg	

Matters needing attention

- 1. When using it for the first time, please check the 220V power supply used Whether it matches and confirm that the socket is intact;
 - 2. Do not directly flush or soak the product in water to avoid damage This machine;
 - 3. Do not allow small animals to fully enter the interior of the box Close the door again to avoid injuring small animals;
 - 4. Please accompany me throughout the blowing process and do not go out Let it run;
 - 5. Small animals that are elderly , prone to stress , and have special illnesses are recommended Avoid using this device. If necessary, please use small Blow dry with air volume;
 - 6. The internal hair collection net needs to be cleaned after each use before it can be used Maintain high efficiency;
 - 7. It is strictly prohibited to use in environments with flammable and explosive materials;
 - 8. Do not use for a long time in damp and dusty places , To avoid causing harm to the device;
 - 9. The exhaust should be kept unobstructed, and the machine should not be placed in the cabinet Zili should maintain a distance of 10cm from obstacles in the surrounding area;
 - 10. Do not use wet hands to plug or unplug the drying oven plug;
 - 11. Cannot disassemble the machine on its own, cannot perform any operations on the machine refit;
 - 12. After use, the socket should be unplugged and the power should be completely cut off; To avoid causing harm to the device;
 - 13. Cleaning this machine can be done by wiping it with laundry detergent, or by Wipe with a hot towel and do not use disinfectant or alcohol Clean with liquids that have severe oxidative and corrosive properties;
- Made in China